

The BLAIN EV4-vvuf program includes the widest range of vvuf solution offered to the elevator industry for high performance passenger elevators. Easy to install, EV4's are smooth, reliable and precise in operation throughout extreme load and temperature variations with inbuilt overload protection and different energy saving modes. The EV4 system uses the control of L1000H vvuf drive in the up travel, while down travel is managed by the EV4 valve itself. In this way, the EV4-vvuf solution offers the most cost-effective and energy-efficient solution.



3/4" EV4



1 1/2" & 2" EV4



2 1/2" EV4

Description

Available port sizes are 3/4", 1 1/2", 2" and 2 1/2" pipe threads, depending on flow. EV4 eliminates high inrush currents and does not require wye-delta switching. According to customers' elevator data, valves are factory adjusted, ready for operation and very simple to readjust if desired. The L1000H YASKAWA drive combined with feedback systems that are designed to compensate elevator speed fluctuations regardless of oil temperature and car load conditions.

Caution: The EV4 valve is to be used only together with YASKAWA L1000H inverter and not as a standalone control valve. EV4 valves include the following features essential for efficient installation and trouble free service:




- Simple Responsive Adjustment
- Temperature and Pressure Compensations
- Pressure Gauge and Shut Off Cock
- Self Closing Manual Lowering
- Self Cleaning Pilot Line Filters

- Self Cleaning Main Line Filter (Z-T)
- Built-in Turbulence Suppressors
- 70 HRC Rockwell Hardened Bore Surfaces
- 100% Continuous Duty Solenoids
- Compact and aesthetic design


Technical Data:

	3/4" EV4	1 1/2" & 2" EV4	2 1/2" EV4	
Flow Range:	l/min (US gpm)	10-125 (2-33)	30-800 (8-212)	500-1530 (130-405)
Pressure Range (valve):	bar (psi)	8-70 (116-1015)	8-70 (116-1015)	8-68 (116-986)
Press. Range CSA (valve):	bar (psi)	8-55 (117-797)	8-55 (117-797)	8-55 (117-797)
Burst Pressure Z:	bar (psi)	575 (8340)	505 (7324)	340 (4931)
Pressure Drop P-Z:	bar (psi)	6 (87) at 125 l/min	4 (58) at 800 l/min	4 (58) at 1530 l/min
Weight:	kg (lbs)	5 (11)	10 (22)	14 (31)
Coils AC:	24 V/1.8 A, 42 V/1.0 A, 110 V/0.43 A, 230 V/0.18 A, 50/60 Hz.			
Coils DC:	12 V/2.0 A, 24 V/1.1 A, 42 V/0.5 A, 48 V/0.6 A, 80 V/0.3 A, 110 V/0.25 A, 196 V/0.14 A.			
Oil Viscosity:	25-75 cSt. at 40°C (104°F).			
Operation oil temperature range:	10°C-60°C (50°F-140°F), for oil VGA46: 250cSt.-20 cSt.			
Optimal oil temperature range:	25°C-55°C (77°F-131°F), for oil VGA46: 100cSt.-24 cSt.			
Ambient temperature range:	0°C-70°C (32°F-158°F)			
			Insulation Class, AC and DC:	IP 68
			Max. Oil Temperature:	70°C (158°F)


3/4" EV4

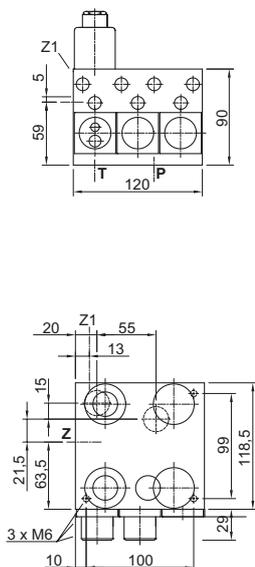

1 1/2" & 2" EV4

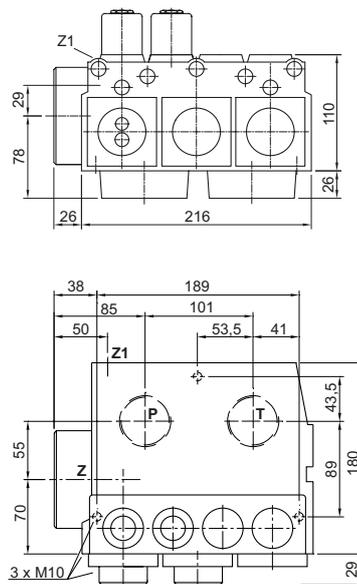

2 1/2" EV4

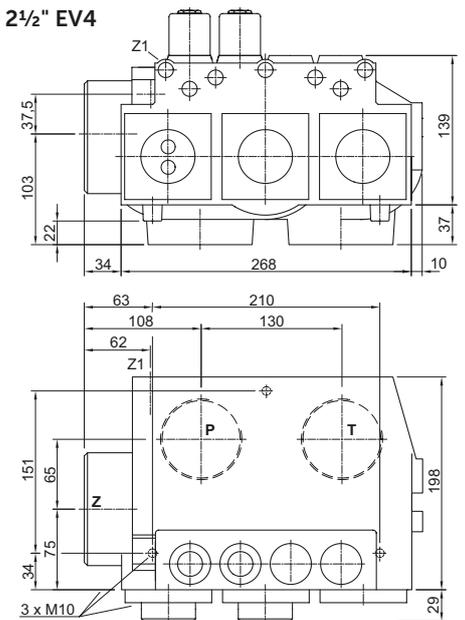

Blain Hydraulics GmbH
 Pfaffenstrasse 1
 74078 Heilbronn
 Germany

Tel. +49 7131 28210
 Fax +49 7131 282199
 www.blain.de
 info@blain.de



GmbH

Designer and Manufacturer of the highest quality control valves & safety components for hydraulic elevators



Optional Equipment

EN	Emergency Power Coil	DH	High Pressure Switch
CSA	CSA Coils	DL	Low Pressure Switch
KS	Slack Rope Valve	CX	Pressure Compensated Down Valve
BV	Main Shut-Off Valve	MX	Auxiliary Down
HP	Hand Pump		

EV4

3/4"



1 1/2" & 2" EV4



2 1/2"



Up Up to 1 m/s (200 fpm). 3 Full Speeds and 1 Levelling Speed. Up Start, speeds, transition times and up stop are adjusted by inverter parameters.

Down Up to 1 m/s (200 fpm). 1 Full Speed and 1 Levelling Speed. All down functions are smooth and adjustable.

Control Elements

C Solenoid (Down Deceleration)	U By Pass Valve
D Solenoid (Down Stop)	V Check Valve
H Manual Lowering	X Full Speed Valve (Down)
S Relief Valve	Y Levelling Valve (Down)
	F Filter


Adjustments UP

None
(Fixed Orifice)

Adjustments DOWN


6 Down Acceleration
7 Down Full Speed
8 Down Deceleration
9 Down Levelling Speed

Hydraulic Circuit

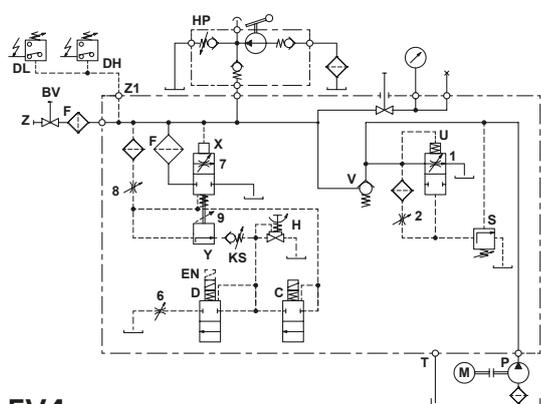

EV4

Electrical Sequence

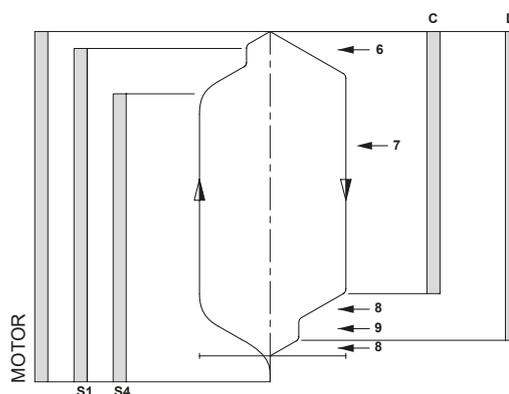


UP direction control

Caution: Please refer to the detailed installation and set-up procedure of the EV4 handbook and L1000H technical manual.

The up direction is controlled by the YASKAWA L1000H inverter. The inverter with the help of its software calculates the load in the car, reads the current oil temperature through a temperature sensor and processes oil and pump performance data in order to obtain motor speeds for the nominal, intermediate, inspection and levelling speeds.

After entering the oil type and elevator data a teach run with empty car is sufficient enough for the inverter to configure itself and learn automatically during the initial set-up.

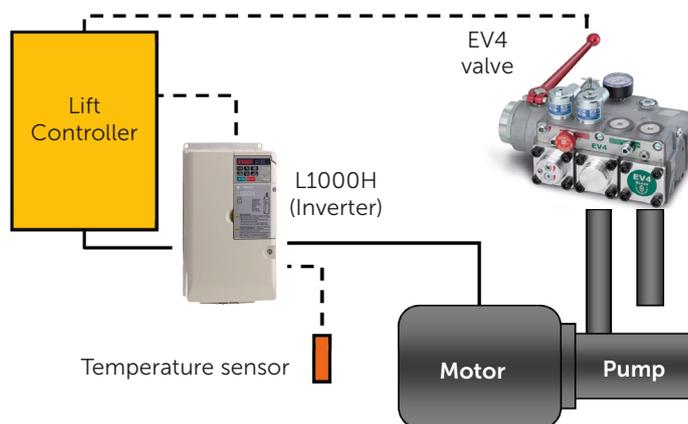



Warning: Only qualified personnel should adjust or service the EV4 valve and the L1000H drive. Unauthorised manipulation may result in injury, loss of life or damage to equipment. Prior to servicing internal parts, ensure that the electrical controller is switched off, cylinder line is closed and residual pressure in the valve is reduced to zero.



Adjustments DOWN

Valves are already adjusted and tested. Check electrical operation before changing valve settings. Test that the correct coil is energised, by removing nut and raising the coil slightly to feel pull.

Standard settings: adj. **7** & **9** level with flange faces, then turn out adj. **9** for ½ a turn; turn in adj. **6** & **8** completely, then for EV¾": turn out adj. **6** for 2½ turns and turn out adj. **8** for 1 turn; for EV1½" - 2½": turn adj. **6** for 2 to 2½ turns out and adj. **8** for 1½ turns out.

6. Down Acceleration: When coils **C** and **D** are energized, the car will accelerate downwards according to the setting of adjustment **6**. 'In' (clockwise) provides a softer down acceleration, 'out' (c-clockwise) a quicker acceleration.

7. Down Speed: With coils **C** and **D** energized as in **6** above, the full down speed of the car is according to the setting of adjustment **7**. 'In' (clockwise) provides a slower down speed, 'out' (c-clockwise) a faster down speed.

8. Down Deceleration: When coil **C** is de-energized whilst coil **D** remains energized, the car will decelerate according to the setting of adjustment **8**. 'In' (clockwise) provides a softer deceleration, 'out' (c-clockwise) a quicker deceleration.

Attention: Do not close all the way in! Closing adjustment 8 completely (clockwise) may cause the car to fall on the buffers.

9. Down Levelling: With coil **C** de-energized and coil **D** energized as in **8** above, the car will proceed at its down levelling speed according to the setting of adjustment **9**. 'In' (clockwise) provides a slower, 'out' (c-clockwise) a faster down levelling speed.

Down Stop: When coil **D** is de-energized with coil **C** remaining de-energized, the car will stop according to the setting of adjustment **8** and no further adjustment will be required.


KS Slack Rope Valve: Both coils **C** and **D** must be de-energized beforehand! Loosen the small grub screw on the top of the **K** on the left hand side. The **KS** is adjusted with a 3 mm Allen key by turning the screw **K** 'in' for higher pressure and 'out' for lower pressure. With **K** turned all the way 'in', then half a turn back out, the unloaded car should descend when Manual Lowering **H** is opened. Should the car not descend, **K** must be turned out until the car just begins to descend, then turned out a further half turn to ensure that with cold oil, the car can be lowered as required.

Adjustments pressure relief valve


Valves are already checked for functionality. Check electrical operation before changing inverter settings. Please refer to the EV4 inverter manual for necessary parameter settings.

S Relief Valve: 'In' (clockwise) produces a higher, 'out' (c-clockwise) a lower maximum pressure setting. After turning 'out', open manual lowering **H** for an instant.

Important: When testing relief valve, close ball valve gradually.

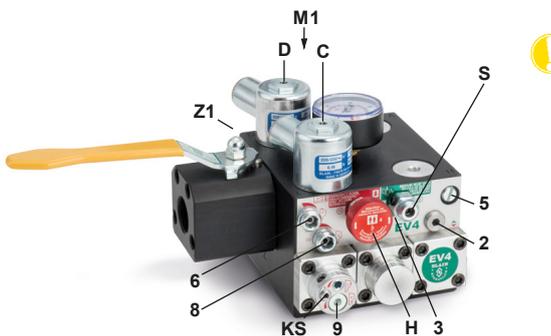

M1 Second pressure gauge connection, ½"
Z1 Pressure switch connection, ¼"

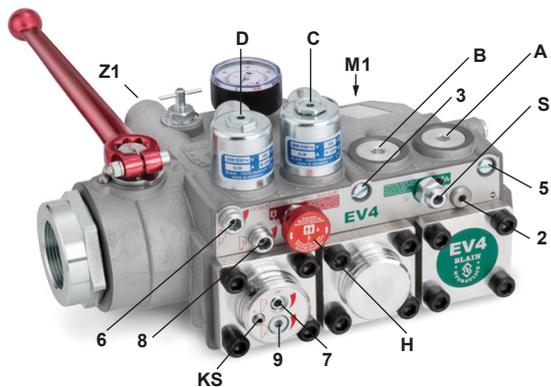

- Adjustments DOWN**
6 Down Acceleration
7 Down Full Speed
8 Down Deceleration
9 Down Levelling Speed

Plugs


- 3**
5
A
B

Control Elements

- C** Solenoid (Down Deceleration)
D Solenoid (Down Stop)
H Manual Lowering
S Relief Valve
U By Pass Valve
V Check Valve
X Full Speed Valve (Down)
Y Levelling Valve (Down)
2 Fix Orifice



Important: Length of ¾" thread on pump connections should not be longer than 14 mm!

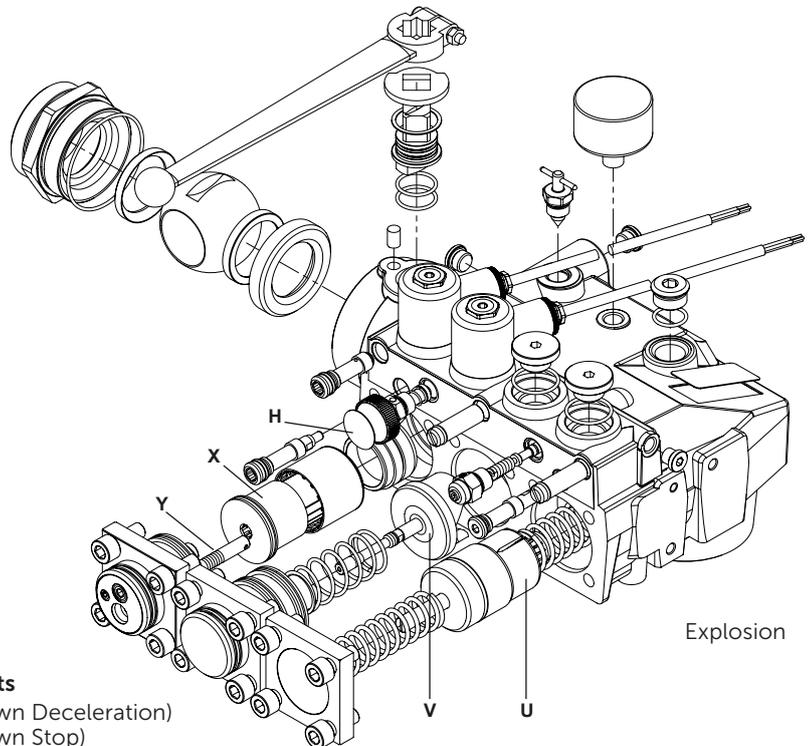




Pos. No.	Item	
1	FS Lock Screw - Flange	
	FO O-Ring - Flange	
	1F4 Flange - By Pass	
	UO 0-Ring - By Pass Valve	
	U4 By Pass Valve	
	UD Noise Suppressor	
	UF1 Spring - By Pass	
	UF2 Spring - By Pass	
US Dead Stop		
2	Fixed orifice	
3	Plug	
4	4F4 Flange - Check Valve	
	FO O-Ring - Flange	
	VF Spring - Check Valve	
	VO Seal - Check Valve	
	V Check Valve	
	W Up-Levelling Valve	
	WO 0-Ring - Up Levelling Valve	
VO Seal - Check Valve		
W6 Screw - Check Valve		
5	3 Plug	
6	Adjustment - Down Acceleration	
7	7F Flange - Down Valve	
	FO 0-Ring - Flange	
	7O 0-Ring - Adjustment	
	7E Adjustment - Down Valve	
	UO 0-Ring - Down Valve	
	XO Seal - Down Valve	
	X Down Valve	
XD Noise Suppressor		
F Main Filter		
8	Adjustment - Down Deceleration	
9	EO 0-Ring - Adjustment	
	9E Adjustment - Down Levelling	
	9F Spring - Down Valve	
	Y Down Levelling Valve	
	H Manual Lowering - Self Closing Seal - Manual Lowering	
H	HO Seal - Manual Lowering	
	SE Adjustment - Screw	
	SM Hexagonal	
	MS Grub Screw	
	SO 0-Ring - Nipple	
	SZ Nipple	
S	SF Spring	
	SK Piston	
	MM Nut - Solenoid	
	M Coil - Solenoid (indicate voltage)	
	DR Tube - Solenoid 'Down'	
	MO 0-Ring - Solenoid	
C+D	DF Spring - Solenoid 'Down'	
	DN Needle - 'Down'	
	DK Core - Solenoid	
	DG Seat Housing with Screen-'Down'	
	FD Filter Solenoid	
	DS Seat - Solenoid 'Down'	
	Some parts occur more than once in different positions of the valve.	

No.	O-Ring-Size		
	3/4"	1 1/2"	2 1/2"
FO	26x2P	47x2.5P	58x3P *
EO	9x2P	9x2P	9x2P
UO	26x2V	39.34x2.62V	58x3V
WO	5.28x1.78V	5.28x1.78V	5.28x1.78V
VO	23x2.5V	42x3V	60x3V **
7O	5.28x1.78P	9x2P	9x2P
XO	13x2V	30x3V	47x3V
HO	5.28x1.78V	5.28x1.78V	5.28x1.78V
SO	5.28x1.78P	5.28x1.78P	5.28x1.78P
MO	26x2P	26x2P	26x2P


* FO by 4F 2 1/2" is 67x2.5P
 ** 90 Shore
 Anillos: V = FKM - Viton
 P = NBR - Perbunan

US is only for EV4 1 1/2" and above sizes!

Solenoid Valves

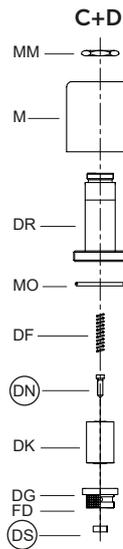





Fix orifice



Plug






Adjustments

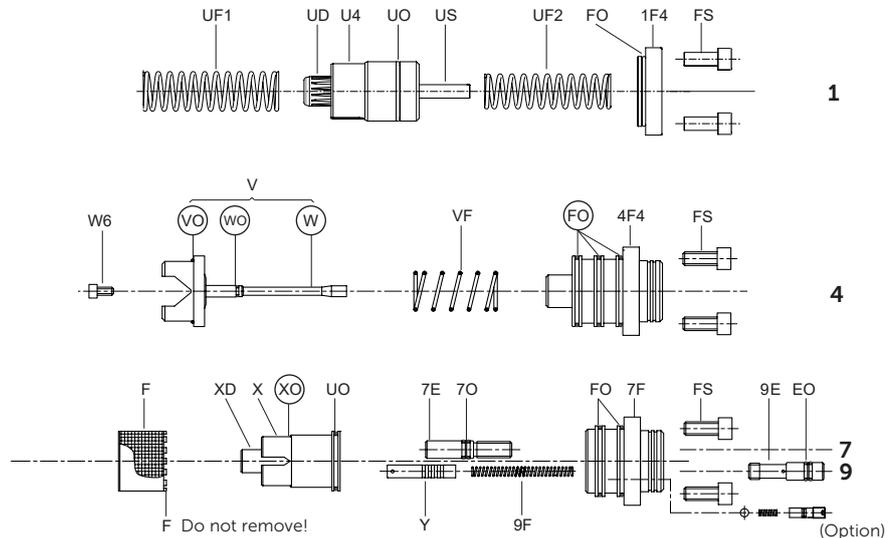




In case of internal leakage, replace and test in the following order: (DS) & (DN), (XO), (VO), (WO), (FO) + (HO).

! Taper threads: Do not exceed 8 turns of piping into the valve connections.

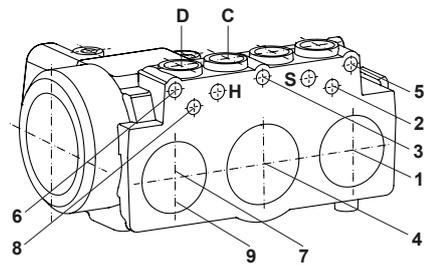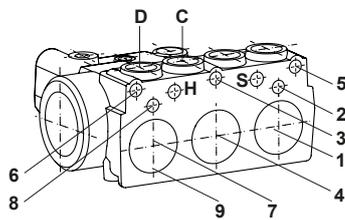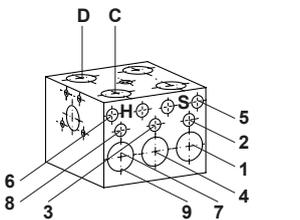

Flow Guide Selection Charts

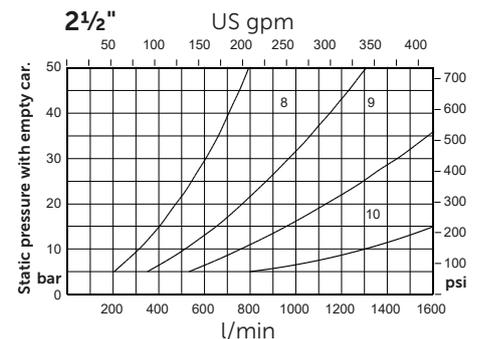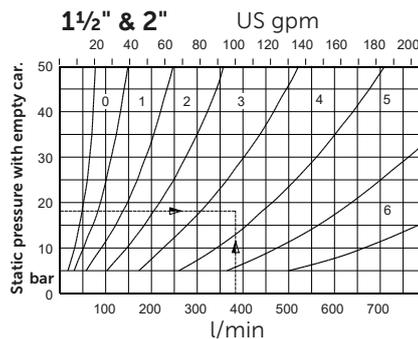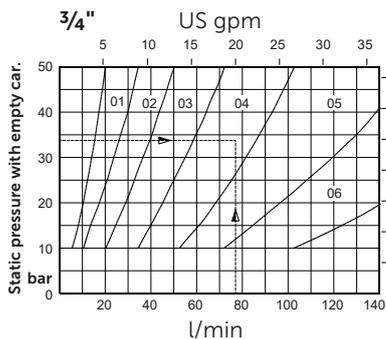

To order EV4: Size (inch), state pump flow, empty car pressure (or flow guide size) and coil voltage.

Example order: 1 1/2"EV4, 380l/min, 18bar (empty), 110AC or 1 1/2"EV4/4/110AC